

Operation of ELS Lock

Electrical Operation:

With NO weapon in unit, lock will click when switch is activated. With weapon IN unit click MAY NOT be heard when switch is activated. Apply pressure against lock with thumb or hand until click is heard – disengaging lock – and remove weapon.

When returning weapon to rack, close latch and make sure the unit is completely locked.

Note: Repeated activation of lock solenoid can cause overheating, which requires that the unit be allowed to cool for proper function.

Manual Operation:

In the event of any vehicle power failure preventing electrical operation of unit, FULLY insert your key in the keyhole and while pressing on latch, turn key. Open latch and remove weapon. To relock, turn and remove key, insert weapon and close latch. Make sure the unit is completely locked.